

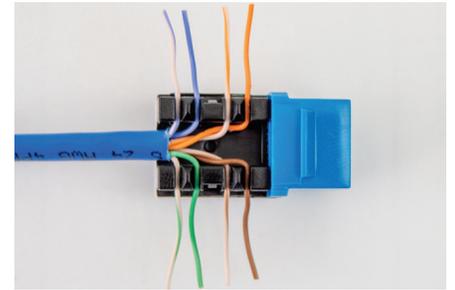


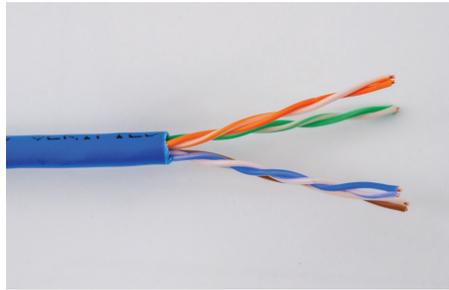

V-MAX Keystone Jacks & I-Punch Tool Termination Instructions

CAT3: 300 & 350 Series | CAT5E: 301 & 351 Series | CAT6: 302 & 352 Series | CAT6A: 303 & 353 Series
I-Punch Tool: 078-2150 (Designed for All Unshielded Keystone Jacks by Vertical Cable)

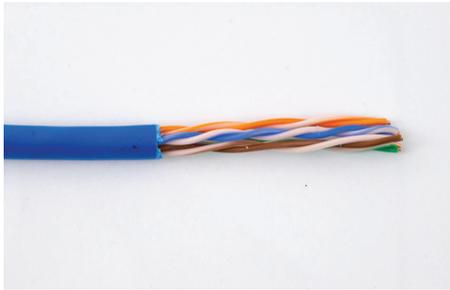


Remove up to 2 inches of the jacket from the cable with a cutter or a stripper. Separate all twisted pairs from each other. Preserve the wire pair twists as close as possible to the point of termination. Determine the wiring scheme and properly align all four cables accordingly on the jack. Keep the cable jacket as close to the connector as possible.





Insert prepared jack & cable assembly into the I-Punch Tool.



Firmly squeeze the handles together, release the handles and repeat this step to ensure a proper termination.

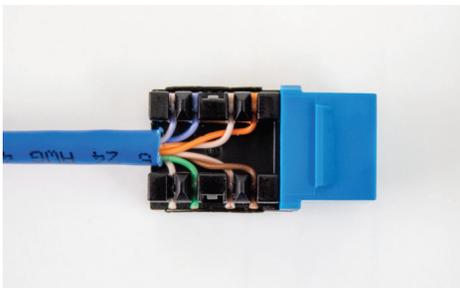

Termination is complete.

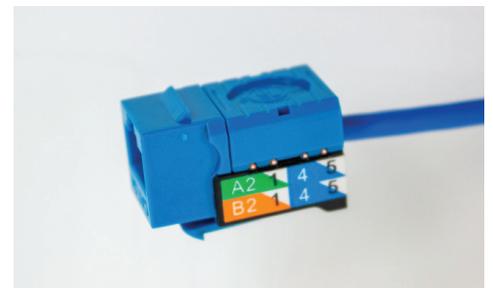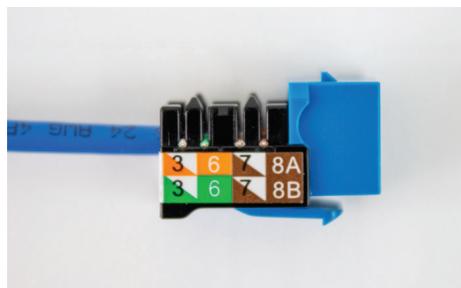

You may also need the following items



Scan to watch the video

verticalcable.com



Category Cable



Wall Plates



Ties, Velcro Tie Wraps



J Hooks & D Rings